



# DECODER USER MANUAL

Step 1: Rightclick to choose NetService when preview, see below pic:

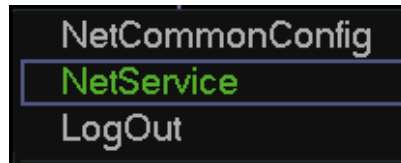


Pic 1

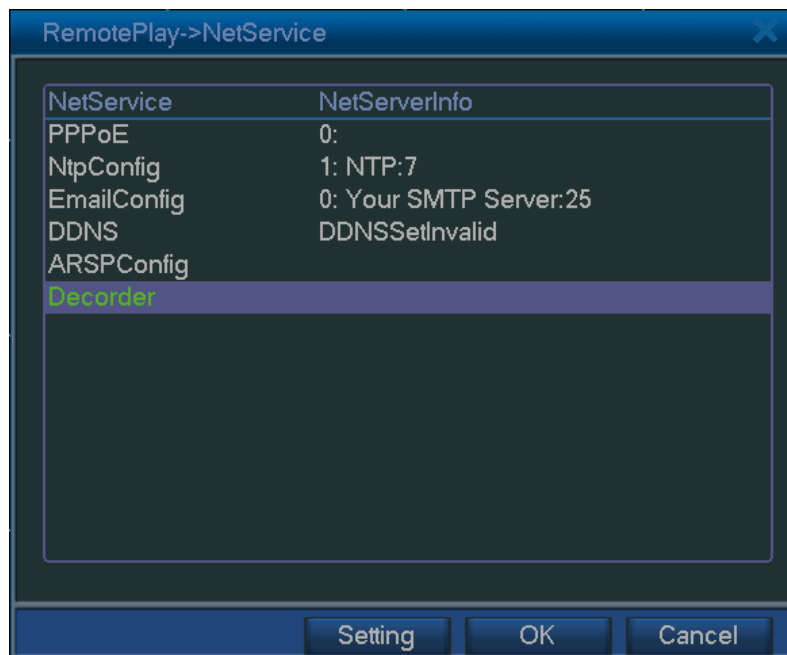

Pic 2

Step 2: Double "Decoder" to go into decoder setting, see below pic:

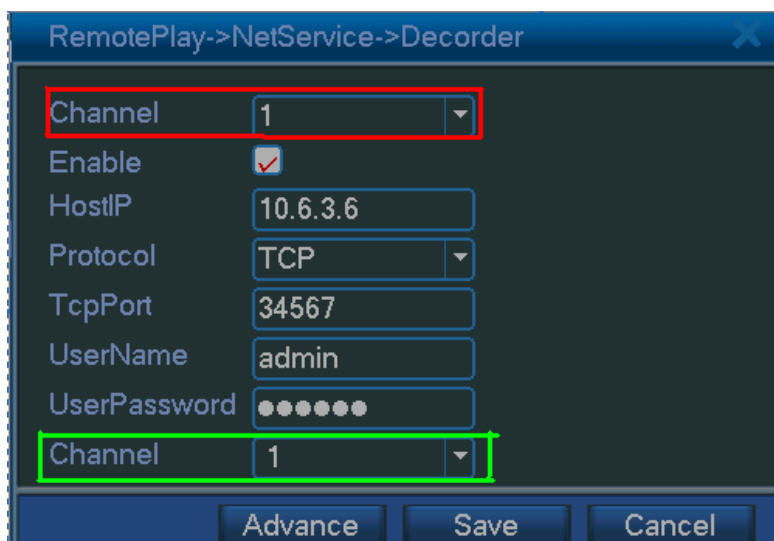

Pic 3

Channel(in red frame): channel number of decoder

Enable: enable the decoder function

HostIP: IP address of the device which you want to decode, both WAN and LAN are OK


TCP: TCP port of the device which you want to decode

User name: user name of the device which you want to decode

Password: password of the device which you want to decode

Channel: chanenl number of the device which you want to decode


After you set it, chick Save, see below Pic.

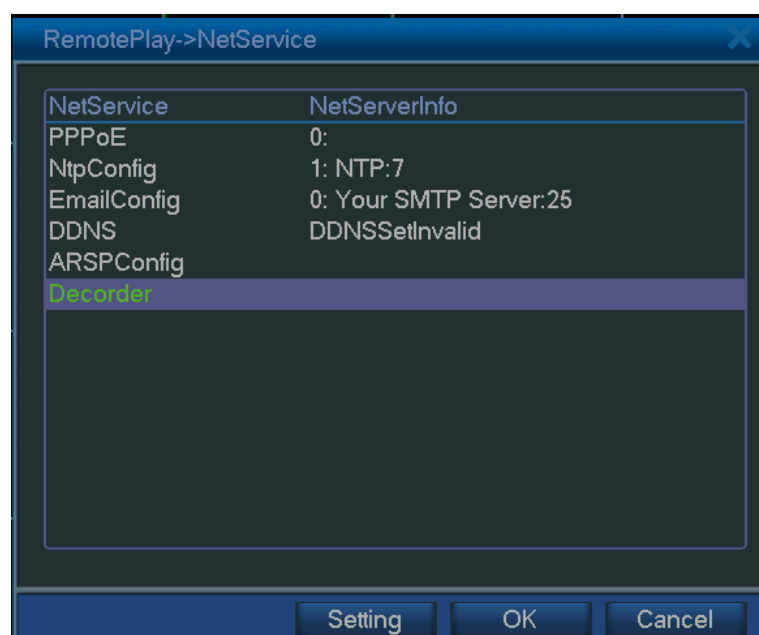

Pic 4

Step 3: In Pic 4,click OK to reboot the decoder,see below pic:

**Note:** Everytime you set the "decode" option, need to reboot the decoder to effect it.

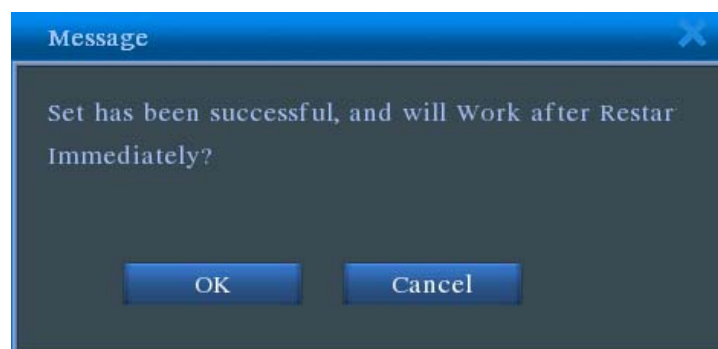

Pic 5